








## AVS REMOTE GUIDE

REMOTE	ABOUT THIS REMOTE
	<p><b>Description:</b> Waterproof remote  <b>Code:</b> TX4-04 433M  <b>Batteries:</b> 2 x CR1616</p> <p><b>Current models it is used on:</b> AVS S-Series range (S5, S4, S3)  AVS A4</p> <p><b>Is it still available:</b> YES</p> <p><b>Alternative option:</b> TX4-03 (torch)</p> <p><b>Historic:</b> Used on AVS S-Series from early 2008.  Always used on the AVS A4.</p>
	<p><b>Description:</b> Torch remote  <b>Code:</b> TX4-03 433M  <b>Batteries:</b> 2 x CR2025</p> <p><b>Current models it is used on:</b> AVS 9000</p> <p><b>Other models it has been used on:</b> AVS S-Series, AVS 6000</p> <p><b>Is it still available:</b> YES</p> <p><b>Alternative option:</b> TX4-04 (waterproof)</p> <p><b>Historic:</b> Used on AVS S-Series (S5, S4, S3) until early 2008.  Used on the late 90's AVS 6000.</p> <p><b>What alarm is it?</b> If the alarm is not a text alarm i.e. the AVS 9000, it is likely to be an earlier version AVS S-Series. If it is very old it may be an AVS 6000.</p>
	<p><b>Description:</b> Surfboard remote  <b>Code:</b> TX2-10 433M  <b>Batteries:</b> 2 x CR1616</p> <p><b>Current models it is used on:</b> AVS 3010</p> <p><b>Other models it has been used on:</b> AVS 4601, AVS 5000i</p> <p><b>Is it still available:</b> YES as a replacement for the AVS 3010 and 5000i  For the AVS 4601 use the TX4-04 (waterproof) or TX4-03 (torch)</p> <p><b>Historic:</b> Used on later generation AVS 4601 and AVS 5000i.  <b>What alarm is it?</b> The AVS 3010 disarms from the bottom button with 3 chirps. It does not auto immobilise. The AVS 4601 will arm and disarm from the top button. The AVS 5000i will arm and disarm with chirps from the top button and silently from the bottom button.</p>
	<p><b>Description:</b> Blue button remote  <b>Code:</b> TX2-01 433M or 303M*  <b>Batteries:</b> 2 x CR1616</p> <p><b>Current models it is used on:</b> None</p> <p><b>Other models it has been used on:</b> AVS 4601, AVS 5000i (12 and 24-volt)</p> <p><b>Is it still available:</b> YES for 303 Mhz* AVS 5000i  For 433 Mhz AVS 5000i use the TX2-10 (surfboard)  For the AVS 4601 use the TX4-04 (waterproof)</p>

	<p>or TX4-03 (torch)</p> <p>Used on early generation AVS 5000i (12 and 24 volt) and AVS 4601.</p> <p>The AVS 4601 will arm and disarm from button 1. The AVS 5000i will arm and disarm with chirps from button 1 and silently from the button 2. *The AVS 5000i was originally released when the remote frequency was still 303 Mhz. If the alarm has a red LED it will need a 303 Mhz remote. There are some 303 Mhz 5000i's with blue LEDs so please use a remote frequency counter to check the frequency before ordering a remote. <b>The wrong frequency remote will not work.</b></p>
--	---

**AVS REMOTE GUIDE continued**

REMOTE	ABOUT THIS REMOTE
	<p><b>Description:</b> Three button remote</p> <p><b>Batteries:</b> 1 x 27A</p> <p><b>Current models it is used on:</b> None</p> <p><b>Other models it has been used on:</b> AVS 6000</p> <p><b>Is it still available:</b> No. Use the TX4-04 (waterproof) or TX4-03 (torch)</p>
	<p><b>Description:</b> 3000 fixed code remote</p> <p><b>Code:</b> TX2-02</p> <p><b>Batteries:</b> 2 x CR2032</p> <p><b>Current models it is used on:</b> None</p> <p><b>Other models it has been used on:</b> AVS 3000</p> <p><b>Is it still available:</b> YES</p>
	<p><b>Description:</b> 2000 fixed code remote</p> <p><b>Code:</b> TX2-01</p> <p><b>Batteries:</b> 2 x CR2025</p> <p><b>Current models it is used on:</b> None</p> <p><b>Other models it has been used on:</b> AVS 2000</p> <p><b>Is it still available:</b> YES</p>

Batteries for all remotes are available from AVS.